

Handlebar Switch Assembly

CTH-104

Dimmer Switch
35250-126-701 35250-045-671
35250-098-671 35250-130-720
Honda Z50A CT70K/H



CTH-105A

Turn Signal Switch
35300-098-951
Honda CT70K 1972-1974



CTT-002

Universal Rear Brake Light Switch
Honda Kawasaki Suzuki Yamaha
(Wire Length 280mm)



CTT-018

Front Brake Light Switch
35340-329-003 35360-341-000
Honda CB125/200/360/400/500/550/750
CM185/200, XL100/125/175/250/500
GL1000 (Wire Length 600mm)



CTT-089E

Universal Handlebar Multi
Switch - R/H



CTO-028

Universal Handlebar Multi
Switch - L/H



CTH-100

Universal Stop / Headlight
Switch Assembly - R/H
35150-437-010
Honda XL125



CTH-259

L/H Switch Assembly
35250-300-033
Honda CB175/500/750
CL175/200/350/450



CTH-291A

L/H Switch Assembly
35200-404-671
Honda CB500 CB750



CTH-292

R/H Switch Assembly
35130-404-671
Honda CB360/500/550/750



CTH-292A

R/H Switch Assembly
35130-377-P00
Honda CB360/400F/550/750



CTH-294

R/H Switch Assembly
35300-341-671
Honda CB550K 1974, CB750K 1973-74



CTH-300

R/H Switch Assembly
35300-323-671
Honda CB500 CB750
(Wire Harness 720mm)



CTH-300A

R/H Switch Assembly
35300-319-670
Honda CB450 1971-72
(Wire harness 750mm)



CTH-301

R/H Switch Assembly
35300-300-672
Honda CB750 K0



CTH-302

L/H Switch Assembly
35250-341-672
Honda CB750K 1972



CTH-305

L/H Switch Assembly
35200-377-003 35200-377-671
Honda CB360T CB400F



CTH-308

L/H Switch Assembly
35200-410-671
Honda CB750F 1977-1978



CTK-028

L/H Switch Assembly
1T3-83973-00-00
Yamaha XS650 1977-1981



CTK-029

R/H Switch Assembly
584-83963-00-00
Yamaha XS650 1976-1979



CTK-030

R/H Switch Assembly
2L0-83975-00-98
Yamaha XS400 1979
XS650 1977-1981



CTY-348

L/H Switch Assembly
1A0-83973-02-98 1A0-83973-01-98
Yamaha XS360/500 RD400



CTY-349

R/H Switch Assembly
1A0-83973-02-00 1A0-83975-00-98
1A0-83975-01-98 2V0-83976-00-00
Yamaha RD400 1976-1979



CTY-350

L/H Switch Assembly
360-83973-02-00
Yamaha RS100 RD125/250/350



CTY-351

R/H Switch Assembly
360-83975-03-00
Yamaha RD250 RD350



CTK-026

L/H Switch Assembly
46091-057 46091-1079 46091-009
Kawasaki KZ900 Z1



CTK-027

R/H Switch Assembly
46132-024 46091-1039
Kawasaki Z1
KZ305/400/440/750/900



CTK-041

L/H Switch Assembly
46091-047
Kawasaki KH250/400/500 Mach I/II/IV
H1 H2



CTK-042

R/H Switch Assembly
46132-025 46132-007
Kawasaki KH250/400 Mach I/II



Replacement Kill Switches



CTT-036

Honda #
35130-KT0-670
35130-KZ3-860

CR60R	83-84
CR80R	80-85
CR85R RB	03-04
CR125	79-85
XR200 XR200R	80-88
CR250R	80-97
XR250 XR250R	80-92
XR350R	83-85
CR450	1981
CR480	83-82
CR500R	84-85
XR500 XR500R	80-84
XR600R	85-87



CTT-028

YAMAHA #
23X-83976-00-00
22W-83976-00-00

YZ60J	1982
IT175J/K	82-83
YZ80 All	86-01
YZ85 "Race Kart"	02-03
YZ85P/R/S	02-04
YZ100D-K	77-83
YZ125L1/N/T/U/W/A	84-90
YZ125 "Race Kart"	02-03
TT125RM/RMC	2000
TTR125LM/LP	00,02
TTR125 TTR125L	00-04
YZ125	77-04
IT200L/N/S	84-86
WR200	1992
TT225S/T	86-87
IT250H/J/K	81-83
YZ250 "Motocross"	84-90
WR250	91-97,01
YZ250	77-11
TY350N/S/T "Trials"	85-86
YZ400F "Motocross"	98-99
WR400FK-FM	98-01
YZ400/F	77-79
WR426F	2001
YZ426FM FN	00-01
IT465	81-82
YZ426G/H	80-81
IT490K/L	83-84
YZ490 YZ490 "Motocross"	82-90
WR500ZD/ZE	92-93
TT600K/L/N/S	83-86



CTT-022

KAWASAKI #
27010-1350
27010-1161

KX60	85-03
KDX80	84-88
KX80/KX80 "Big Wheel"	84-90
KDX125	84-02
KDX200	84-06
KDX220	97-05
KDX250	84, 91-94
KLX250	94-96
KX250	84-04
KXT250 "Tecate"	1985
KLX300	97-07
KX500	84-04
KLX650	93-96



CTT-035

SUZUKI
37820-14X50
37820-27C00

JR50	00-06
RM50	78-90
RM60	79-83
DS80	96-00
RM80S	01-04
RM85	77-85, 96-01
RM85L	86-95
RM100	02-08
RM125	03-08
RM125M	76-81
RM125S	75-80, 86-88
RM250	89-91
RM250N	92-95
RM250S	76-79, 86-88
RMX250T	89-96
RMX250W	97-98
RM400	78-79